DENON

REMOTE CONTROL UNIT

RC-7000CI

OWNER'S MANUAL

取扱説明書

安全にお使いいただくために一必ずお守りください。

- お買い上げいただき、ありがとうございます。
- ご使用の前にこの取扱説明書をよくお読みのうえ、正しくご使用ください。
- お読みになった後は後日お役に立つこともありますので、必ず保存してください。

- 日本語と英語以外の言語の取扱説明書は添付のCD-ROMに収録しています。
- Instructions in languages other than English and Japanese are included on the CD-ROM.
- Die Bedienungsanleitung in anderen Sprachen als Englisch und Japanisch finden Sie auf der CD-ROM.
- Les instructions en langues autres que le japonais et l'anglais sont inclus dans le CD-ROM.
- Istruzioni in lingue diverse dall'inglese e dal giapponese sono incluse nel CD-ROM.
- Las instrucciones en idiomas diferentes a Inglés y Japonés se incluyen en el CD-ROM.
- Instructies in andere talen dan het Engels en Japans zijn terug te vinden op de CD-ROM.
- Anvisningar på andra språk än engelska och japanska finns på den medföljande CD-ROM-skivan.

IC Information (For Canadian customers)

1. DEVICE
RC-7000CI IC: 6963A-RC7000
This device complies with RSS-210 of Industry Canada.
Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
APPAREIL
RC-7000CI IC: 6963A-RC7000
Cet appareil est conforme à la norme CNR-210 du Canada.
L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif

IMPOTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Only use attachments/accessories specified by the manufacturer.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
10. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

FCC Information (For US customers)

1. DEVICE
RC-7000CI FCC ID: BV2-RC7000
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. IMPORTANT NOTICE: DO NOT MODIFY THIS DEVICE
This device, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the device.

3. NOTE
This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of device or an experienced radio/TV technician for help.

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.
When discarding the unit, comply with local rules or regulations.
Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.
This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.
Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.
Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften.
Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEE-Direktive.

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.
Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur.
Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.
Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.
Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.
Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.
Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.
Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales.
Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.
Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING MET BETREKKING TOT DE RECYCLING:

Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.
Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.
Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.
Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

OBSERVERA ANGÅENDE ÅTERVINNING:

Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser.
När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.
Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.
Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.

- **DECLARATION OF CONFORMITY**

  Hereby, D&M Holdings Inc., Denon Brand Company declares that this product RC-7000CI is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, in conformity with the following standards;

  EN300328, EN301489-01 and EN301489-17

  The declaration of conformity may be consulted to our European representative, DENON EUROPE.

- **ÜBEREINSTIMMUNGSERKLÄRUNG**

  Hiermit erklärt D&M Holdings Inc., Denon Brand Company, dass sich das Gerät RC-7000CI in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet, den folgenden Standards entspricht:

  EN300328, EN301489-01 und EN301489-17

  Wenden Sie sich bei Fragen zur Konformitätserklärung an unseren europäischen Vertreter, DENON EUROPE.

- **DECLARATION DE CONFORMITE**

  Par la présente, D&M Holdings Inc., Denon Brand Company déclare que l'appareil RC-7000CI est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE, e conforme alle seguenti normative:

  EN300328, EN301489-01 et EN301489-17

  La déclaration de conformité pourra être consultée auprès de notre représentant en Europe, DENON EUROPE.

- **DICHIARAZIONE DI CONFORMITÀ**

  Con la presente D&M Holdings Inc., Denon Brand Company dichiara che questo RC-7000CI è con-forme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE, e conforme alle seguenti normative:

  EN300328, EN301489-01 e EN301489-17

  La dichiarazione di conformità può essere consultata presso il nostro rappresentante europeo, DENON EUROPE.

  QUESTO PRODOTTO E' CONFORME

  AL D.M. 28/08/95 N. 548

- **DECLARACIÓN DE CONFORMIDAD**

  Por la presente, D&M Holdings Inc., Denon Brand Company, declara que este RC-7000CI cumple con los requisitos esenciales y otras exigencias relevantes de la Directiva 1999/5/EC, esta conforme con los siguientes estandares:

  EN300328, EN301489-01 y EN301489-17

  Puede consultar a nuestro representante europeo, DENON EUROPE, acerca de la declaración de conformidad.

- **EENVORMIGHEIDSVERKLARING**

  Hierbij verklaart D&M Holdings Inc., Denon Brand Company dat het toestel RC-7000CI in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG, in overeenstemming is met de volgende normen:

  EN300328, EN301489-01 en EN301489-17

  De eenvormigheidsverklaring mag worden geconsulteerd aan onze Europese vertegenwoordiger, DENON EUROPA.

- **ÖVERENSSTÄMMELSESINTYG**

  Denna utrustning är i överensstämmelse med de väsentliga kraven och andra relevanta bestämmelser i Direktiv 1999/5/EC, uppfyller foljande standarder:

  EN300328, EN301489-01 och EN301489-17

  EU-konformitetsintyget kan på begäran fås från DENON EUROPE, vår representant i Europa.

DENON EUROPE
Division of D&M Germany GmbH
An der Landwehr 19, Nettetal,
D-41334 Germany

Getting Started

Thank you for purchasing this DENON product. To ensure proper operation, please read these owner's manual carefully before using the product.
After reading them, be sure to keep them for future reference.

Contents

Getting Started

Accessories 1
Inserting the batteries 1
Operating range of the remote control unit 2
Part names and functions 2

Operation

Introduction 3
Settings menu map 4
Operation the LCD button 5
Settings
Setting the screen display time 5
Setting the backlight on time 6
Adjusting the contrast 6
Completing the setting 6
Various settings
Using the preset memory function 7
Using the learning function 7, 8
Using the Macro function 8, 9
Using the delay time function 9
Using the code search function 9
Favorites settings 10, 11
Using the punch through function 11
Editing pages 11, 12
Editing devices ..... 12 ~ 15
Editing buttons ..... 15 ~ 18
Deleting signals registered with the learning function 18
Deleting signals registered with the macro function 19
Deleting favorites 19
Deleting the registered punch-thru function 19
Operational reset 20
User reset 20
Lock function 21
Unlock function 21

Network function 22

Operations using nodes
Adding nodes (1) 23
Adding nodes (2) 23
Deleting nodes 24
Viewing nodes 24
Changing node labels 25
Setting the receiver display mode (RDM) 25
Checking the remote control unit version 25

PC Application

RC-7000CI Editor function 26
RC-7000CI Editor installation 26
Using RC-7000CI Editor 26

Troubleshooting 27

Specifications 27

Accessories

Check that the following parts are supplied with the product.

① Owner's Manual 1
② Remote control 1
③ LR03/AAA batteries 4
④ CD-ROM 1
⑤ USB cable (Cord length: Approx. 3.3 ft / 1 m) 1

Inserting the batteries

① Lift the clasp and remove the rear lid.

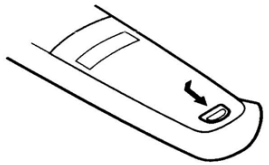

② Load the four batteries properly as indicated by the marks in the battery compartment.

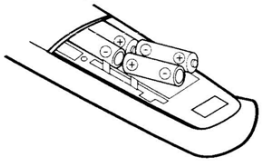

③ Put the rear cover back on.

NOTE

- Use a LR03/AAA battery for the remote control unit.
- If you try to operate the RC-7000CI / 7001RCI near the device you want to operate but the device does not operate, replace the batteries with new ones. (The included batteries are only meant for verifying operation. Replace them with new batteries soon.)
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not attempt to charge dry batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.
- "LOW BATTERY"appears on the LCD when the remaining battery power decreases. When this happens, replace the battery as soon as possible.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

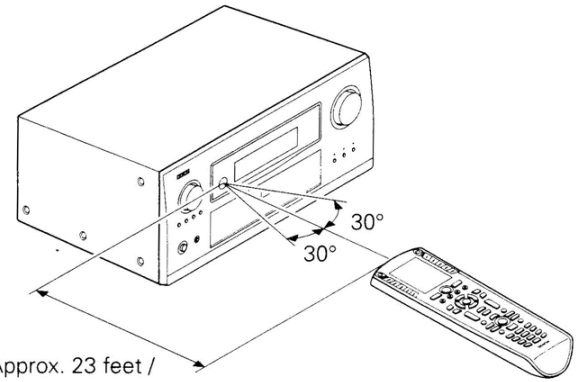

NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

For instructions on using with RF connections, refer to the operating instructions of the RC-7001RCI (sold separately).

Part names and functions

For buttons not explained here, see the page indicated in parentheses ( ).

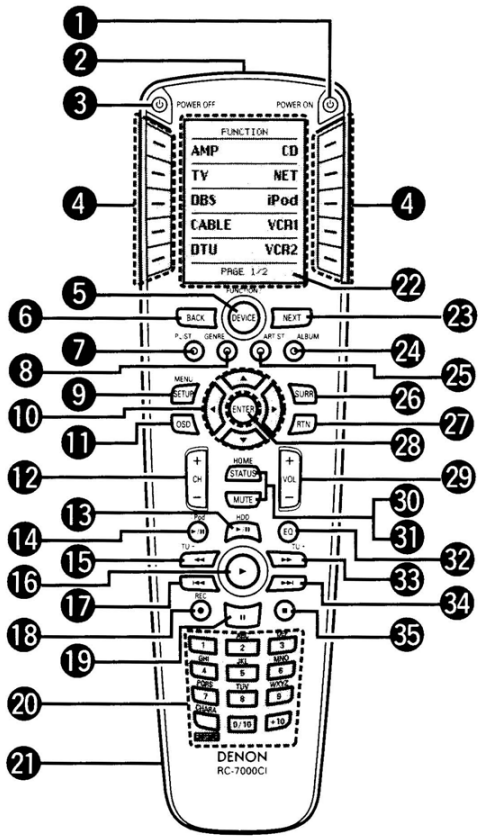

❶ **POWER ON button**
❷ **Remote control signal transmitter**
❸ **POWER OFF button**
❹ **LCD buttons** ..... (3, 5 ~ 7)
❺ **FUNCTION / DEVICE button** ..... (6)
❻ **BACK button** ..... (3, 5 ~ 7)
❼ **Red button**
❽ **Green button**
❾ **SETUP / MENU button** ..... (11)
❿ **Cursor buttons (△▽◁ ▷)** ..... (11)
⓫ **On-screen display button (OSD)** ..... (11)
⓬ **Channel buttons (CH + –)** ..... (11)
⓭ **HDD ►/❚❚ button** ..... (11)
⓮ **iPod ►/❚❚ button** ..... (11)
⓯ **Tuning – / Search button (◄◄)** ..... (7, 11)
⓰ **Play button (►)** ..... (7)
⓱ **Skip button (I◄◄)** ..... (7)
⓲ **REC button (●)** ..... (11)
⓳ **Pause button (❚❚)** ..... (7, 11)
⓴ **Function / Number buttons** ..... (5 ~ 7)
㉑ **USB port**
㉒ **Display** ..... (3)
㉓ **NEXT button** ..... (3, 5 ~ 7)
㉔ **Blue button**
㉕ **Yellow button**
㉖ **Surround parameter button (SURR)** ..... (11)
㉗ **Return button (RTN)** ..... (11)
㉘ **ENTER button** ..... (11)
㉙ **Master volume control buttons (VOL + –)** ..... (11)
㉚ **STATUS / HOME button** ..... (11)
㉛ **MUTE button** ..... (11)
㉜ **EQ button** ..... (11)
㉝ **Tuning + / Search button (►►)** ..... (7, 11)
㉞ **Skip button (►►I)** ..... (7, 11)
㉟ **Stop button (■)** ..... (7, 11)

About USB ports

When editing the RC-7000CI's functions using the exclusive "RC-7000CI Editor" application software, connect the included USB cable (☞page 26).

Operation

Introduction

Operation of the LCD buttons

When buttons on the remote control unit are pressed, various settings and operation items appear on the LCD screen.

❑ Operation for selecting

- Press the **LCD button** to the left or right of the displayed item name to select it.
- The screen is displayed for 5 seconds. Operate while the screen is displayed. ("Setting the screen display time" (☞page 5))
- When "PAGE" is displayed at the bottom of the screen, there are one or more other pages in addition to the one currently displayed. Use the **NEXT** and **BACK** button to switch screens.

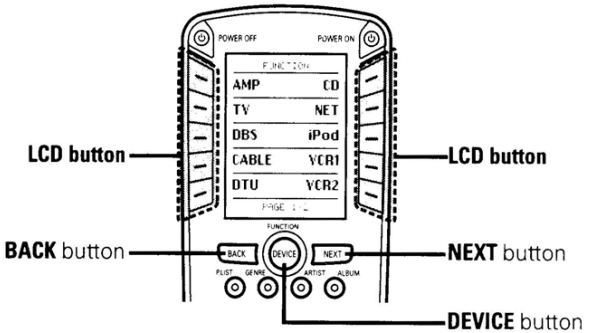

❑ Indication of item names in this manual

In this manual, the names of items displayed on the screen are indicated **[ ]**. (Example: **[Denon1]**)

When batteries are loaded for the first time

Make the setting described below.

1 To use to operate an AV amplifier (AV receiver), press [Denon1].

※ **[Denon2]** is a function for system expansion in the future. Normally select **[Denon1]**.

2 Press [YES].

3 Press NEXT.

After "PLEASE WAIT" is displayed, the default device is set to **[Denon1]**.

4 Press DEVICE.

The initial settings screen appears.

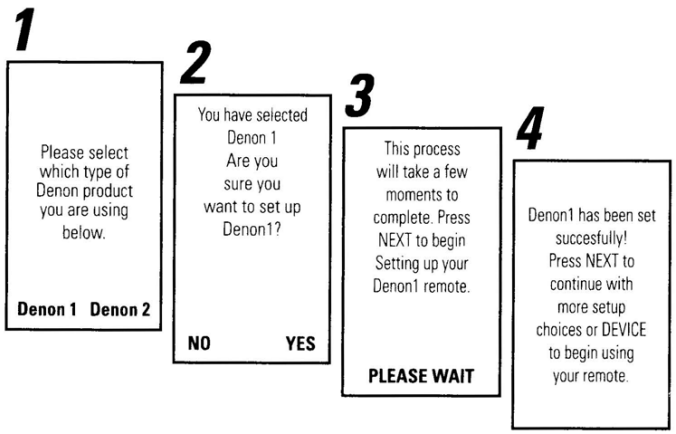
1
Please select which type of Denon product you are using below.
Denon 1 Denon 2
2
You have selected Denon 1 Are you sure you want to set up Denon1?
NO YES
3
This process will take a few moments to complete. Press NEXT to begin Setting up your Denon1 remote.
PLEASE WAIT
4
Denon1 has been set succesfully! Press NEXT to continue with more setup choices or DEVICE to begin using your remote.

When the LCD screen in the display on screen ***1*** goes off, press the **RC SETUP** button for 3 seconds to resume the original screen.

Initial display screen

The initial display settings are shown on the display below.

【Screen 1】

DEVICE SELECT	
AMP	ZONE2
ZONE3	ZONE4
TUNER	CD
DVD	TV
SAT	Cable
Page 1/2	

【Screen 2】

DEVICE SELECT	
VCR 1	iPod
VCR 2	NetAud
DTU	
Page 2/2	

Initial setting	
TV	Hitachi
SAT	RCA
Cable	Motorola
VCR-1	Hitachi
VCR-2	SONY
Others	DENON

When using the RF two-way communication function

Change the amplifier setting to "RF" at "Setting the remote control code transmission mode (In the case of RF)" (☞page 15).

NOTE

A DENON product compatible with the RC-7001RCI (sold separately) is required to use this function.

Settings menu map

- ❑ **BASIC SETUP** (☞page 7, 9)
  - BRAND SET
  - CODE SEARCH
- ❑ **FAVORITES** (☞page 10, 19)
  - ADD / REDO
  - DELETE
  - CONFIGURE
    - FAV DEVICE
    - FAV IR DELAY
    - TOTAL DIGITS
    - CHANNEL KEY
- ❑ **MACROS** (☞page 8, 9, 19)
  - ADD / REDO
  - DELETE
  - EDIT DELAY
- ❑ **PUNCH THRU** (☞page 11, 19)
  - ADD
    - CHANNEL TUNE
    - TRANSPORTS
    - VOLUME CONT.
    - MENU NAVIG.
  - CLEAR
    - CHANNEL TUNE
    - TRANSPORTS
    - VOLUME CONT.
    - MENU NAVIG.
- ❑ **LEARNING** (☞page 7, 18)
  - LEARN KEY
  - ERASE LEARN
- ❑ **EDIT PAGE** (☞page 11, 12)
  - ADD PAGE
  - DELETE PAGE
- ❑ **EDIT DEVICE** (☞page 11, 13)
  - MOVE/SWAP
  - MOVE/INSERT
  - COPY
  - ERASE
  - DISPLAY MODE
  - IR/RF
- ❑ **EDIT TEXT** (☞page 15, 18)
  - DEVICE NAME
  - KEY NAME
- ❑ **EDIT FUNC** (☞page 15, 16, 17)
  - MOVE/SWAP
  - MOVE/INSERT
  - COPY
  - ERASE
  - DISPLAY MODE
  - ADD FUNC
  - ADD Synth ※

※ This is a function for system expansion in the future.

- ❑ **RESET/LOCK** (☞page 20, 21)
  - OP RESET
  - USER RESET
  - LOCK
  - UNLOCK
- ❑ **NETWORK** (☞page 23, 24)
  - ADD NODES
  - DELETE NODES
  - VIEW NODES
  - EDIT LABEL
- ❑ **USER PREF** (☞page 5, 6, 25)
  - VERSION INFO
  - CONTRAST
  - DISPLAY T/O
  - LIGHT T/O
  - RDM

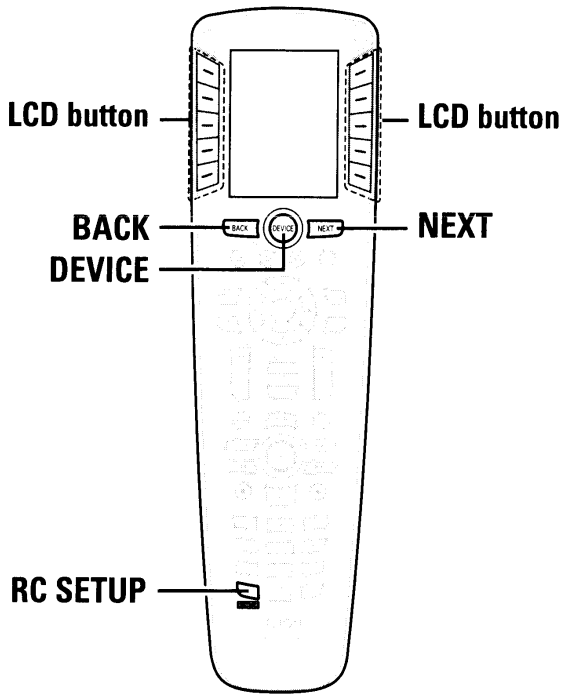

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Operation the LCD button

1 **Press DEVICE.**

The "DEVICE SELECT" menu is displayed.

2 **Press the LCD button for the device (equipment) you want to operate.**

※ If there are multiple pages, use the **NEXT** and **BACK** button to switch screens.

3 **Press the LCD button for the item you want to operate.**

※ If there are multiple pages, use **NEXT** and **BACK** to switch screens.

Settings

Setting the screen display time

Use this procedure to set the time until the screen display turns off.

Initial setting: 5 seconds

1 **Press RC SETUP for 3 seconds.**

The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [USER PREF].**

3 **Press [DISPLAY T/O].**

4 **Press NEXT.**

5 **Press [–DISPLAY T/O+] to set the time until the light turns off.**

- **LCD button** on right side ..... +
- **LCD button** on left side ..... –

※ The time can be set between 1 (MIN) and 30 (MAX).

6 **Press [SAVE].**

7 **Press NEXT.**

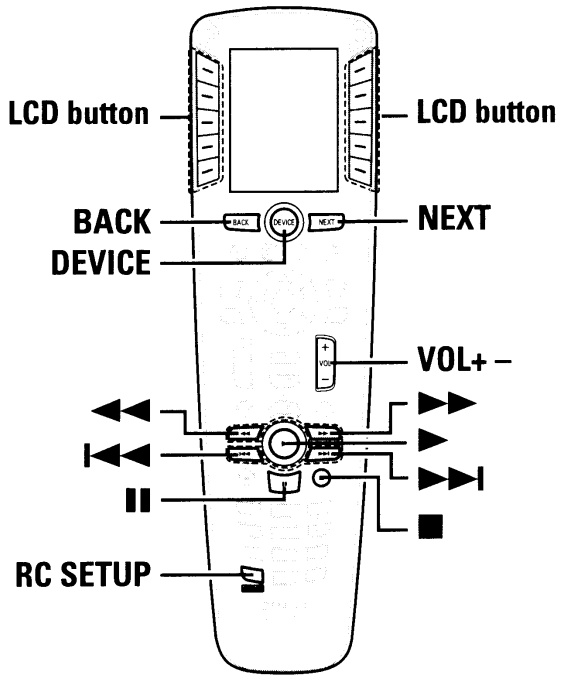

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Setting the backlight on time

Use this procedure to set the time until the backlight turns off.

Initial setting: 5 seconds

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [USER PREF].**

3 **Press [LIGHT T/O].**

4 **Press NEXT.**

5 **Press [–LIGHT T/O+] to set the time until the light turns off.**
- **LCD button** on right side .....+
- **LCD button** on left side .....–

※ The time can be set between Light Off and 30 (MAX).

6 **Press [SAVE].**

7 **Press NEXT.**

Adjusting the contrast

Set this if the characters on the screen are hard to see.

Initial setting: Level 5

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [USER PREF].**

3 **Press [CONTRAST].**

4 **Press NEXT.**

5 **Press [–CONTRAST+] to set the contrast.**
- **LCD button** on right side .....+
- **LCD button** on left side .....–

※ The contrast can be set within the range of "Level 0 (MIN)" to "Level 12 (MAX)".

6 **Press [SAVE].**

7 **Press NEXT.**

Completing the setting

Press DEVICE until the "DEVICE SELECT" screen appears.

Various settings

Using the preset memory function

The remote control unit can be preset to operate devices of various brands.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press [BASIC SETUP].**

3 **Press [BRAND SET].**

4 **Press NEXT.**

5 **At the "Press Device Type" screen, press the LCD button for the device you want to set in the preset memory.**

6 **Press NEXT.**

7 **At the "Select Brand" screen, press the LCD button for the device's brand name.**

※ If the brand you want to choose is not displayed, press **NEXT** to switch the brand display.
※ If there are multiple codes, "1 of *" is displayed. (* is the number of codes)

8 **Use ▶, ■, ❚❚, ◀◀, ▶▶, I◀◀, ▶▶I, VOL+ – to check whether the device to be added operates.**

Operates..... [YES]
• The IR/RF selection screen appears.

Does not operate..... [NO]
• The screen switches to the next code. Find the code that operates and set it by pressing **[YES]**.

9 **Press [IR] or [RF] to select the remote control signal.**

[IR]:
Infrared signals are transmitted.
[RF]:
Send RF signals to the RC-7001RCI remote control receiver (sold separately).

※ For details on the RC-7001RCI (sold separately), see "Network function" (☞page 22).

10 **At the "Select Position" screen, press the LCD button for the posision at which you want to add the preset device.**
The setting is entered.

※ Press **[NO]** to end, **[YES]** to continue.

NOTE

Depending on the product's year of manufacture and differences in functions from model to model, there may be some buttons that do not operate or buttons that operate erroneously.

Using the learning function

This function lets you register the desired remote signals of devices by sending them to the remote control unit.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press [LEARNING].**

3 **Press [LEARN KEY].**

4 **Press NEXT twice.**

5 **At the "Select Device" screen, press the LCD button for the device whose remote control signals you want to register.**

6 **At the "Learn Key" screen, press the LCD button for the operation button name you want to register.**

※ Signals can be "learned" at buttons other than **RC SETUP**, **NEXT**, **BACK** and **DEVICE**.

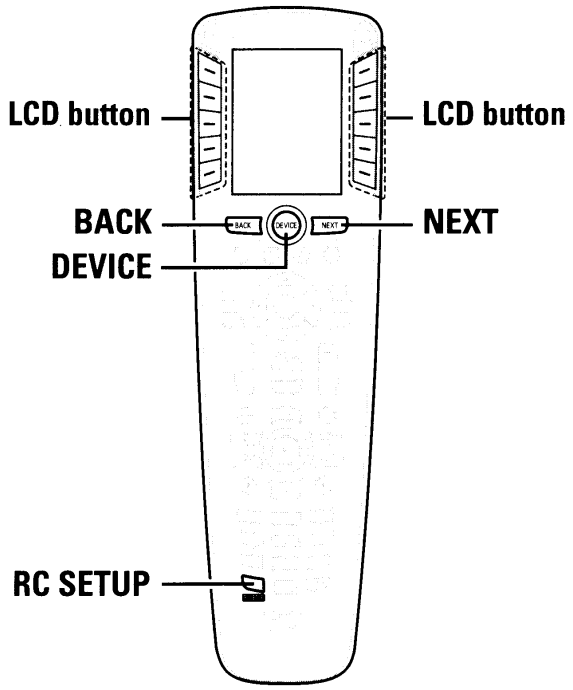

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

7 **Place the remote control units with their signal transmitters facing each other, press NEXT, then immediately press the button on the remote control unit you want to register.**

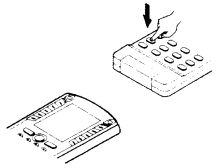

"Success!" is displayed if the code was learned successfully.

8 **To register other buttons, press NEXT.**

※ Repeat steps **6** to **8**.

9 **Press [EXIT] to exit the learning mode.**

※ Press **[EDIT]** if you want to change the button name. Perform the procedure at "Changing the button name" (☞ page 18) starting from step **7**.

NOTE

The learning function may not work for some remote control units, and sometimes a device may not operate properly even if its remote control signals have been learned. In this case, use the remote control unit included with the device.

Using the Macro function

This function allows you to register a series of operations at a single button.

With this function you can for example turn on the amplifier, select the input source, turn on the TV's power, turn on the source device's (equipment) power and set the play mode all by pressing a single button.

1 **Press RC SETUP for 3 seconds.**

The "PROGRAM DEVICE" menu is displayed.

2 **Press [MACROS].**

3 **Press [ADD/REDO].**

4 **Press NEXT twice.**

5 **At the "Assign Macro" screen, press the LCD button for the device (equipment) for which you want to register the macro.**

6 **Press the button at which you want to register the macro.**

※ Macros can be registered at buttons other than **NEXT**, **BACK** and **DEVICE**.

7 **Press NEXT to register the next signal.**

※ Press **DEVICE** to select the device.

※ Repeat steps **5** to **6**.

8 **Press RC SETUP.**
The registration menu is displayed.

9 **Press [SAVE] to register the set macro.**

[TEST]:
Press this to send the registered macro to check it.
[– DELAY +]:
Use these to set the transmission interval. This can be set to between "0.05(MIN)" and "60(MAX)". (Initial setting: 0.25 seconds)
[CANCEL ENTRY]:
Press this to cancel the last code registered and return to the registration mode.
[START OVER]:
Press this to start over from the beginning.

10 **Press [EXIT] to end the setting.**

※ Press **[EDIT]** if you want to change the button name (macro name).
Perform the procedure at "Changing the button name" (☞page 18) starting from step **7**.

NOTE
The macro setting button cannot be registered in a macro.

Using the delay time function

The interval at which the remote control signals registered with the system call function are sent (the "delay time") can be set.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press [MACROS].**

3 **Press [EDIT DELAY].**

4 **Press NEXT twice.**

5 **The "Edit Macro" screen is displayed. Select a macro that has been registered.**

6 **Press NEXT.**

7 **Use [– DELAY +] to change the delay time, then press [SAVE].**

[TEST]:
Press this to send the registered macro to check it.
[– DELAY +]:
Use these to set the transmission interval.
[CREATE AGAIN]:
The macro registration screen reappears.

8 **Press [EXIT] to end the setting.**

Using the code search function

This function lets you search for preset codes when adding new devices (equipment) to the remote control unit.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press [BASIC SETUP].**

3 **Press [CODE SEARCH].**

4 **Press NEXT.**

5 **At the "Press Device Type" screen, press the LCD button for the device (equipment) whose code you want to search for.**

6 **Press NEXT twice.**

7 **If the device (equipment) operates when the remote control unit's buttons are pressed, press [YES].**

※ If **[NO]** is pressed, the code switches. Press a remote control unit button again to check. Press **[BACK]** to return to the previous code.

8 **At the "Select Position" screen, press the LCD button for the position at which you want to add the preset device (equipment).**

※ Press **[NO]** to end, **[YES]** to continue.

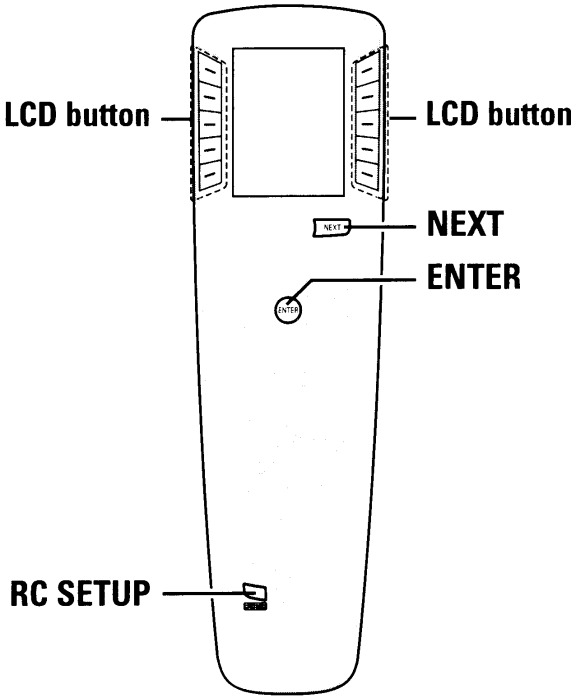

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Favorites settings

Use this function to register your favorite channel numbers so they can be operated with a single button.

Favorites settings

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press [FAVORITES].**

3 **Press [CONFIGURE].**

4 **Press NEXT twice.**

5 **At the "CONFIGURE FAV" screen, press the LCD button for the item you want to set.**

[FAV DEVICE]:
Press this to select the device to be stored in the favorites.
This is initially set to "SAT".
[FAV IR DELAY]:
Press this to set the interval at which the remote control signals are sent when buttons at which favorites have been registered are pressed.
[TOTAL DIGITS]:
Use this to set the number of digits of channels registered in the favorites.
[CHANNEL KEY]:
Set this toadd **ENTER** after registered favorites
(Set this for types of devices for which **ENTER** is pressed to set the channel after selecting it with the number buttons.)
To add **ENTER** at the end of the channel, press **ENTER**. If you do not want to add **ENTER**, press **NEXT**.

※ When **[EXIT]** is pressed, the setting is completed. Press **[CONFIG]** to continue registering.

Registering favorites

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press [FAVORITES].**

3 **Press [ADD/REDO].**

4 **Press NEXT.**

5 **Press [KEY].**

※ When **[PAGE]** is selected, pages can be added to **[MAIN]** or **[DEVICE]**.

When **[PAGE]** is selected, press **[MAIN]** or **[DEVICE]**.
When **[MAIN]** is selected, press **[YES]** to set.
When **[DEVICE]** is selected, select the device (equipment) for which a page is to be added.

6 **Press NEXT.**

7 **At the "Assign Favorite" screen, select the button for the place to be stored in the favorites.**

8 **Input the number (channel) you want to register.**

9 **Press NEXT.**

10 **Press [SAVE] to register the favorite.**

※ Press **[EDIT]** if you want to change the button name.

11 **Press [EXIT] to end the registration.**
Press [ADD] to continue registering.

Using the punch through function

Even when a different device mode is selected, it is possible to assign the buttons below to a different device in units of groups.
For example, the DVD play operation can be performed even if the operating mode is set to the amplifier.

1 **Press RC SETUP for 3 seconds.**
The"PROGRAM DEVICE" menu is displayed.

2 **Press [PUNCH THRU].**

3 **Press [ADD].**

4 **Press NEXT.**

5 **At the "Punch Thru" screen, press the LCD button for the group you want to set.**
The functions for which punch thru can be assigned in units of groups are as shown on the table below.

Groups	Functions
CHANNEL TUNE	**CH+, CH–, STATUS, 1~9, 0/10, +10**
TRANSPORTS	**iPod ▶/II, HDD ▶/II, EQ, ◀◀, ▶▶, I◀◀, ▶▶I, REC, II, STOP,**
VOLUME CONTROL	**VOL+, VOL–, MUTE**
MENU NAVIGATION	**SETUP, SURR, OSD, RTN, △▽◁▷, ENTER**

6 **Press NEXT.**

7 **At the "Source Device" screen, press the LCD button for the device of the group you want to set.**

8 **Press NEXT.**

9 **At the "Target Device" screen, press the LCD button or the device whose group selected at step 7 you want to send.**

10 **Press [YES].**

※ Press **NEXT** to return to the setting menu.

Editing pages

Pages can be inserted and devices (equipment) or buttons can be added in the device (equipment) select menu or in the individual devices.

Inserting pages

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT PAGE].**

3 **Press [ADD PAGE].**

4 **Press NEXT.**

5 **Press [MAIN] to add a page to the device select menu, [DEVICE] to add a page in the device (equipment).**

※ When and only when **[DEVICE]** is selected, press the **LCD button** for the device to which you want to add a page.

6 **Press [YES].**
The page is added.

※ Press **NEXT** to return to the setting menu.

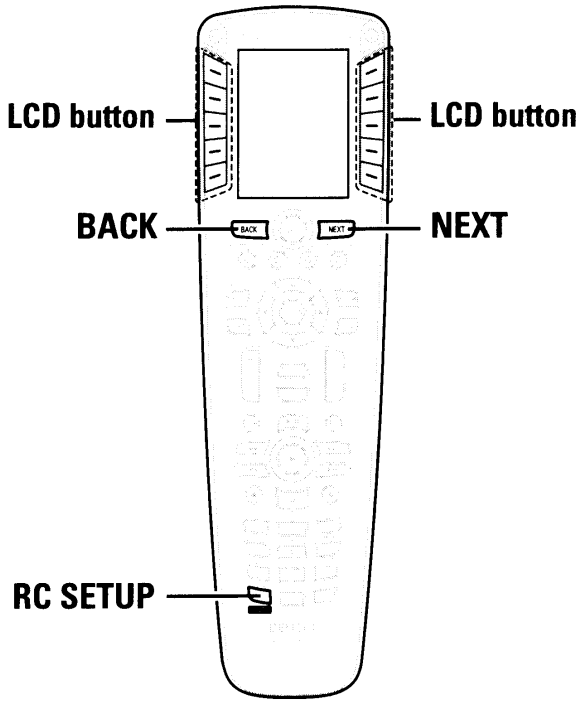

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Deleting pages

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT PAGE].**

3 **Press [DELETE PAGE].**

4 **Press NEXT.**

5 **Press [MAIN] to delete a page from the device select menu, [DEVICE] to delete a device (equipment) page.**

6 **Select the page to be deleted using NEXT and BACK, then press [SELECT PAGE].**

7 **Press [YES].**
The page is delete.

※ Press **NEXT** to return to the setting menu.

Editing devices

Devices registered in the remote control unit can be moved, copied and inserted.

Moving or swapping devices

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press [MOVE/SWAP].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device (equipment) you want to move.**

6 **Press NEXT.**

7 **At the "Target Device" screen, press the LCD button for the target destination or the device (equipment) to be substituted.**

8 **Press [YES].**
The device is moved.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Inserting devices

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press [MOVE/INSERT].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device you want to move.**

6 **Press NEXT.**

7 **At the "Target Device" screen, press the LCD button in the place you want to insert.**

8 **Press [YES].**
The device is moved.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Copying devices

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press [COPY].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device (equipment) you want to copy.**

6 **Press NEXT.**

7 **At the "Target Device" screen, press the LCD button for the place you want to copy.**
The device at the copy destination is cleared and the device is copied.

8 **Press [YES].**
The device is moved.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Deleting devices

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press [ERASE].**

4 **Press NEXT.**

5 **At the "Select Device" screen, press the LCD button for the device you want to delete.**

6 **Press [LEAVE EMPYT] or [SHIFT ALL UP].**

[LEAVE EMPTY]:
The device (equipment) is deleted.
[SHIFT ALL UP]:
The device is deleted and the other devices are all shifted up, filling in the space of the deleted device.

7 **Press [YES].**
The device is deleted.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

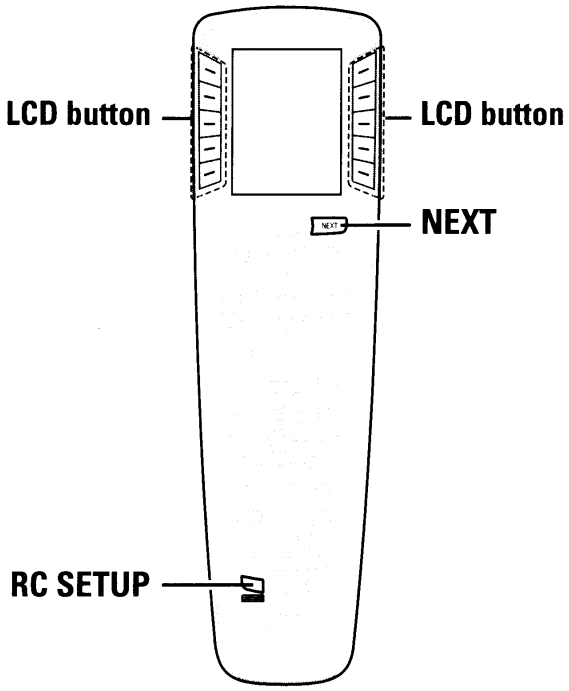

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Setting the device display mode

Use this procedure to select the way in which the devices (equipment) are displayed.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press [DISPLAY MODE].**

4 **Press NEXT.**

5 **At the "Select Device" screen, press the LCD button for the device whose display mode you want to change.**

6 **Press [COLUMN MODE] or [ROW MODE].**

[COLUMN MODE]:
The devices are displayed two per row.
[ROW MODE]:
The devices are displayed one per row.

7 **Press [YES].**
The display mode is set.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

NOTE

The display mode is not set in the device. Set with respect to the **LCD button** position.

Setting the remote control code transmission mode (In the case of IR)

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press NEXT.**

4 **Press [IR/RF].**

5 **Press NEXT.**

6 **At the "Select Device" screen, press the LCD button for the device whose transmission mode you want to change.**

7 **Press NEXT.**

8 **Press [IR].**

[IR]:
The codes are sent as infrared signals.

9 **Press [YES].**
The transmission mode is set.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Setting the remote control code transmission mode (In the case of RF)

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT DEVICE].**

3 **Press NEXT.**

4 **Press [IR/RF].**

5 **Press NEXT.**

6 **At the "Select Device" screen, press the LCD button for the device whose transmission mode you want to change.**

7 **Press NEXT.**

8 **Press [RF], then press [YES].**

[RF]:
The codes are sent as radio waves.

9 **Press NEXT.**

※ When **[RF]** is selected, the RC-7001RCI (sold separately) node number is displayed. Press **LCD button**.
※ The setting at "Adding nodes" (☞page 23) must be made in order to add **[RF]**.

10 **Press [YES].**
The transmission mode is set.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Changing the device name

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT TEXT].**

3 **Press [DEVICE NAME].**

4 **At the "Select Device" screen, press the LCD button for the device (equipment) whose name you want to change.**

5 **Press NEXT.**

6 **At the "Edit Text" screen, use the first column of LCD buttons to select the position of the character to be edited.**

7 **Select the character to be input with the second column of LCD buttons, then press [SELECT].**

※ Lower case letters are input when **[CAPS]** is displayed, capital letters when **[lower]** is displayed.
Up to 12 characters can be input.

8 **Press [SAVE].**

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Editing buttons

Use this procedure to move, copy and insert buttons.

Moving or swapping buttons

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT FUNC].**

3 **Press [MOVE/SWAP].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device of the button you want to move.**

6 **At the "Select Key" screen, press the LCD button of the button you want to move.**

7 **Press NEXT.**

8 **At the "Target Device" screen, press the LCD button of the device for the destination or the button to be swapped.**

9 **At the "Select key" screen, press the LCD button for the destination or the button to be swapped.**

10 **Press [YES].**
The button moves or is replaced.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

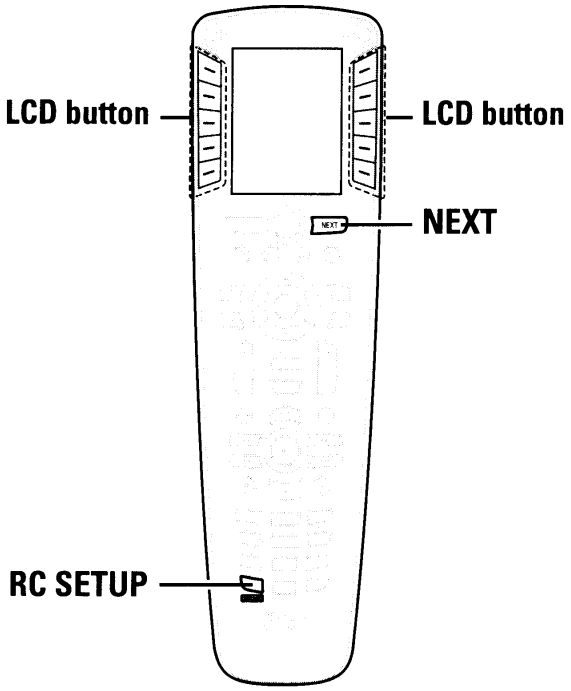

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Inserting buttons

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT FUNC].**

3 **Press [MOVE/INSERT].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device of the button you want to move.**

6 **At the "Select key" screen, press the LCD button for the button you want to move.**

7 **Press NEXT.**

8 **At the "Target Device" screen, press the LCD button for the device of the button for the place to be inserted.**

9 **At the "Select key" screen, press the LCD button for insert destination.**

10 **Press [YES].**
The button is inserted.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Copying buttons

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT FUNC].**

3 **Press [COPY].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device (equipment) of the button you want to copy.**

6 **At the "Select key" screen, press the LCD button for the button you want to copy.**

7 **Press NEXT.**

8 **At the "Target Device" screen, press the LCD button of the device to copy to.**

9 **At the "Select Key" screen, press the LCD button for copy destination.**

10 **Press [YES].**
The button is copied.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Deleting buttons

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT FUNC].**

3 **Press [ERASE].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device of the button you want to delete.**

6 **At the "Select key" screen, press the LCD button for the button you want to delete.**

7 **Press [LEAVE EMPYT] or [SHIFT ALL UP].**

[LEAVE EMPTY]:
The button is deleted.
[SHIFT ALL UP]:
The button is deleted and the other buttons are all shifted up, filling in the space of the deleted button.

8 **Press [YES].**
The button is deleted.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Setting the button display mode

Use this procedure to select the way in which the buttons are displayed.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT FUNC].**

3 **Press [DISPLAY MODE].**

4 **Press NEXT.**

5 **At the "Select Device" screen, press the LCD button for the device of the button whose display mode you want to change.**

6 **At the "Select key" screen, press the LCD button for the button whose display mode you want to change.**

7 **Press [COLUMN MODE] or [ROW MODE].**

[COLUMN MODE]:
The buttons are displayed two per row.
[ROW MODE]:
The buttons are displayed one per row.

8 **Press [YES].**
The display mode is set.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Adding buttons

When new buttons are added, it is possible to select and add new functions.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [EDIT FUNC].**

3 **Press NEXT, then press [ADD FUNC].**

4 **Press NEXT.**

5 **At the "Source Device" screen, press the LCD button for the device (equipment) you want to add.**

6 **Press NEXT.**

7 **At the "ADD IR" screen, press the LCD button for the function of the button you want to add.**

8 **Press NEXT.**

9 **At the "Select key" screen, press the LCD button for the position of the button you want to add.**

10 **Press [TEST KEY], and if the operation has been performed press [YES].**

※ Press **[YES]** to add more buttons.

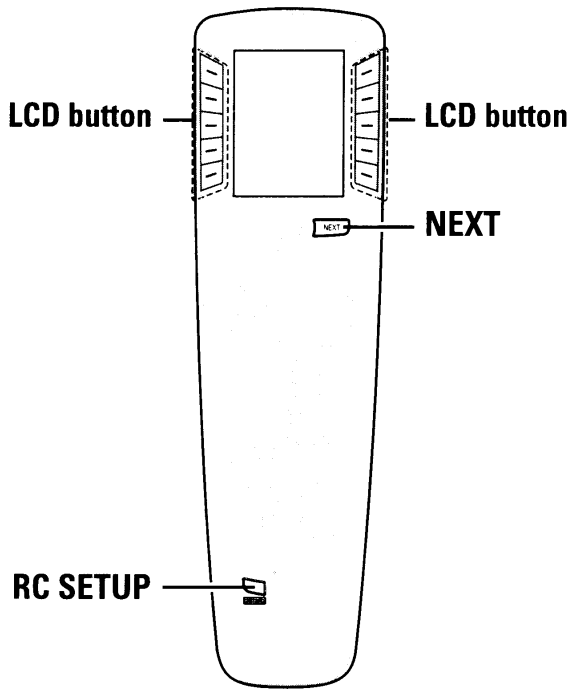

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Changing the button name

1 Press **RC SETUP** for 3 seconds.
The "PROGRAM DEVICE" menu is displayed.

2 Press **NEXT**, then press **[EDIT TEXT]**.

3 Press **[KEY NAME]**.

4 At the "Select Device" screen, press the **LCD button** for the device whose button name you want to change.

5 At the "Select key" screen, select the **LCD button** for the button whose button name you want to change.

6 Press **NEXT**.

7 At the "Edit Text" screen, use the first column of **LCD buttons** to select the position of the character to be edited.

8 Select the character to be input with the second column of **LCD buttons**, then press **[SELECT]**.

※ Lower case letters are input when **[CAPS]** is displayed, capital letters when **[lower]** is displayed.
Up to 12 characters can be input.

9 Press **[SAVE]**.

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Deleting signals registered with the learning function

1 Press **RC SETUP** for 3 seconds.
The "PROGRAM DEVICE" menu is displayed.

2 Press **[LEARNING]**.

3 Press **[ERASE LEARN]**.

4 Press **NEXT** twice.

5 At the "Source Device" screen, press the **LCD button** for the device you want to delete.

6 At the "Select Key" screen, press the button for the learning function you want to erase.

7 To delete, press **[YES]**.
If you do not want to delete, press **[NO]**.

※ Press **[NO]** to end, **[YES]** to continue.

Deleting signals registered with the macro function

1 Press **RC SETUP** for 3 seconds.
The "PROGRAM DEVICE" menu is displayed.

2 Press **[MACROS]**.

3 Press **[DELETE]**.

4 Press **NEXT** twice.

5 At the "Source Device" screen, press the **LCD button** for the device (equipment) whose macro you want to delete.

6 At the "Select Key" screen, press the **LCD button** for the macro you want to delete.

7 To delete, press **[YES]**.
If you do not want to delete, press **[NO]**.

※Press **[NO]** to end, **[YES]** to continue.

Deleting favorites

1 Press **RC SETUP** for 3 seconds.
The "PROGRAM DEVICE" menu is displayed.

2 Press **[FAVORITES]**.

3 Press **[DELETE]**.

4 Press **NEXT** twice.

5 At the "Source Device" screen, press the **LCD button** for the device (equipment) you want to delete.

6 At the "Select key" screen, press the **LCD button** for the button you want to delete.

7 To delete, press **[YES]**.
If you do not want to delete, press **[NO]**.

※Press **[NO]** to end, **[YES]** to continue.

Deleting the registered punch-thru function

1 Press **RC SETUP** for 3 seconds.
The "PROGRAM DEVICE" menu is displayed.

2 Press **[PUNCH THRU]**.

3 Press **[CLEAR]**.

4 Press **NEXT**.

5 At the "Punch Thru" screen, press the **LCD button** for the group you want to delete.

6 Press **NEXT**.

7 At the "Select Device" screen, press the **LCD button** for the device (equipment) whose punch through setting you want to delete.

8 To delete, press **[YES]**.
If you do not want to delete, press **[NO]**.

※Press **NEXT** to return to the settings menu.

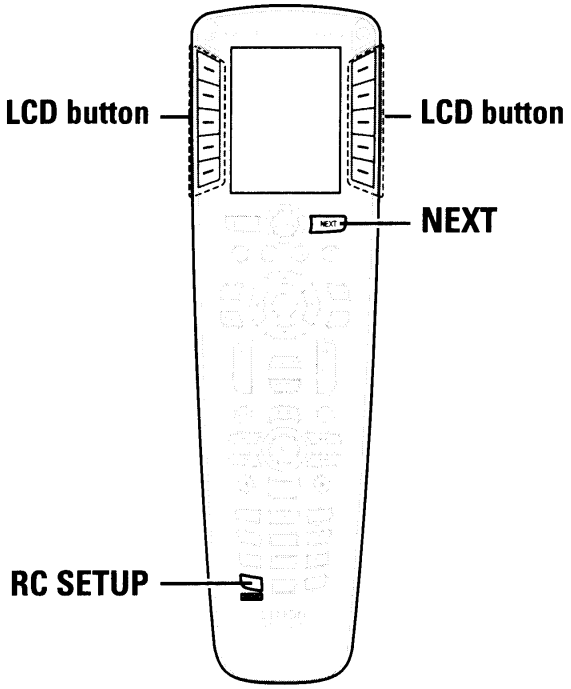

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Operational reset

The settings are returned to as they were upon purchase.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [RESET/LOCK].**

3 **Press [OP RESET].**

4 **Press NEXT.**

5 **Press [YES].**

6 **Press NEXT.**
"PLEASE WAIT" is displayed.

7 **Press NEXT.**
The settings are returned to as they were upon purchase (☞page 3).

User reset

This procedure deletes the macro settings added by the user and the remote control codes that have been learned. It does not delete added devices.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [RESET/LOCK].**

3 **Press [USER RESET].**

4 **Press NEXT.**

5 **Press [YES].**

6 **Press NEXT.**
"PLEASE WAIT" is displayed and the setting is reset.

7 **Press NEXT.**
The settings menu reappears.

Lock function

When locked, device (equipment) editing is not possible.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [RESET/LOCK].**

3 **Press [LOCK].**

4 **Press NEXT twice.**

5 **At the "Select Device" screen, press the LCD button for the device (equipment) you want to lock.**

6 **Press [YES].**

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Unlock function

This procedure unlocks devices (equipment) that have been locked.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT, then press [RESET/LOCK].**

3 **Press [UNLOCK].**

4 **Press NEXT twice.**

5 **At the "Select Device" screen, press the LCD button for the device (equipment) you want to unlock**

6 **Press [YES].**

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Network function

This functions uses the RC-7001RCI (sold separately).

When a wireless (RF) network is established using the RC-7001RCI (sold separately), the RC-7001RCI is called a node. An individual node number is registered for each RC-7001RCI unit. When registering devices with the RC-7001RCI, once the RF transmission settings are made, when a button on a device for which the node number is set is pressed, the remote control signals are sent (wireless) and received by the RC-7001RCI corresponding to the node number of the transmission target.

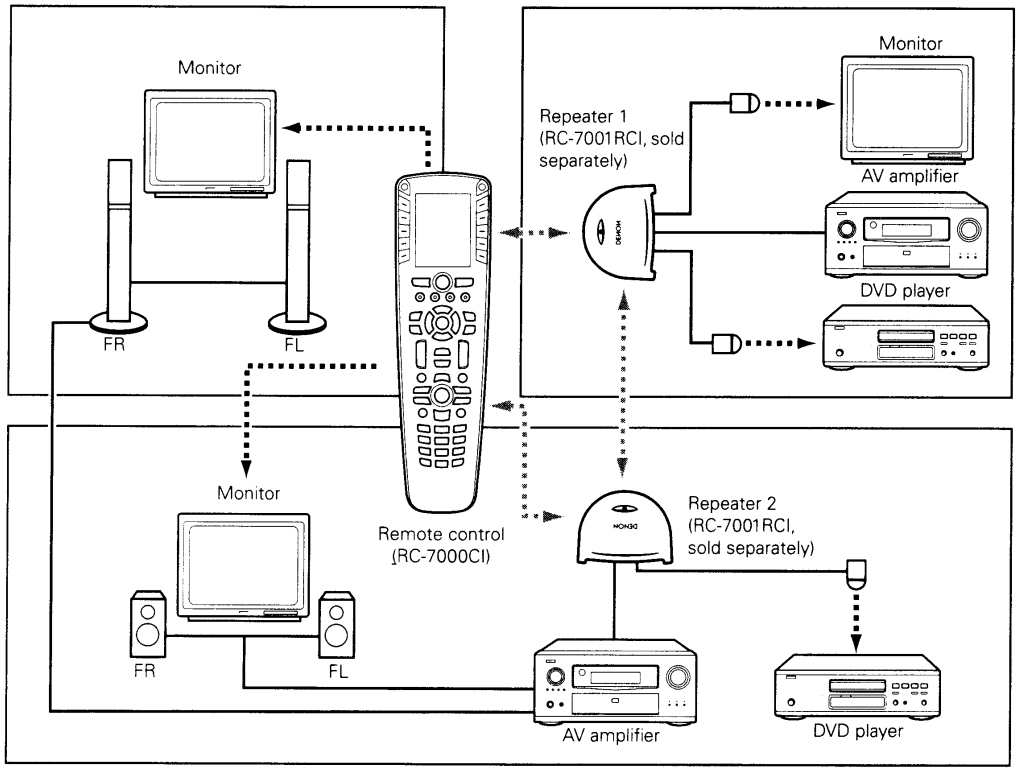

NOTE

- Using the wireless function near microwave ovens, devices using a wireless LAN, cordless telephones, Bluetooth devices or other wireless devices could adversely affect communications performance. In this case move away from the interfering device.
- If the RC-7000C1 cannot properly receive radio signals due to excessive distance between it and the RC-7001RC1, radio interference, etc., "RF OUT OF RANGE"is displayed on the LCD screen.

◀▪▪▪▪▪▪▪▪ : IR (Infrared communications)

◀▪▪▪▪▪▪▶ : RF (Two-way communications)

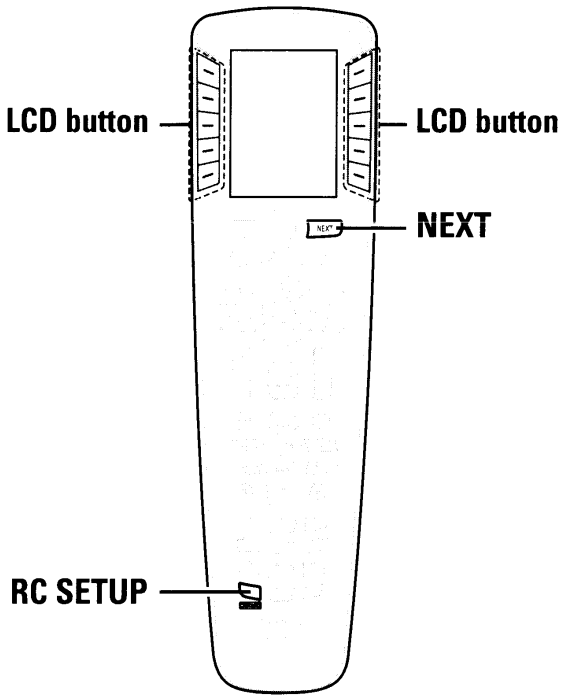

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Operations using nodes

Adding nodes (1)

Use this procedure to register a node number and add an RC-7001RCI (sold separately) to the network.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [NETWORK].**

3 **Press [ADD NODES].**

4 **Press NEXT.**

5 **To add the remote control unit to the network, press [REMOTE].**

6 **Press RESET/CONFIG on the RC-7001RCI (sold separately) for about 1 second.**
The indicator flashes green.

7 **Press NEXT twice.**
"Success!" is displayed when the device has been added successfully.

※Press **NEXT** to return to the settings menu.

Adding nodes (2)

Use this procedure to add a second or more units of the RC-70001CI (sold separately) to the network.

Press **RESET/CONFIG** on the RC-7001RCI (sold separately) for at least 10 seconds so that the indicator lights red.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [NETWORK].**

3 **Press [ADD NODES].**

4 **Press NEXT.**

5 **To add the RC-7001RCI to the network, press [OTHER].**

6 **Press RESET/CONFIG on the RC-7001RCI (sold separately) for about 1 second.**
The indicator flashes red.

7 **Press NEXT twice.**
"Success!" is displayed when the device has been added successfully.

※Press **NEXT** to return to the settings menu.

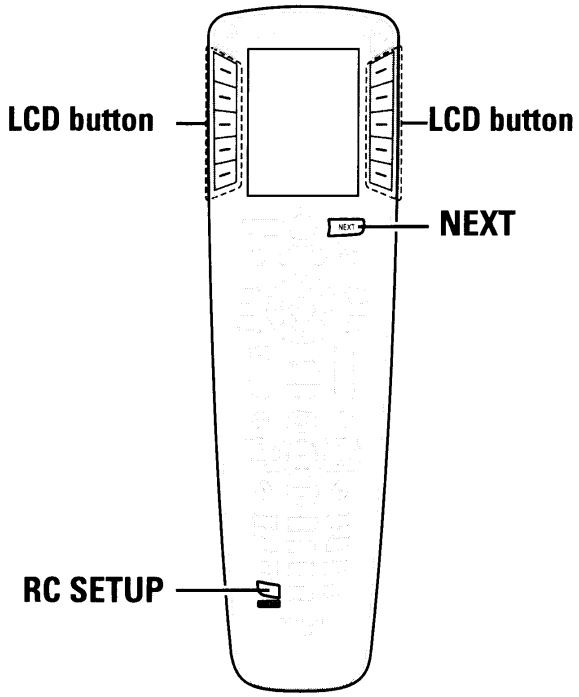

About the button names in these explanations

[ ] : LCD buttons for selection items

Button name only:

Indicates a button on the remote control unit

Deleting nodes

Use this procedure to delete RC-7001RCI (sold separately) units by specifying the node number from the current network.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [NETWORK].**

3 **Press [DELETE NODES].**

4 **Press NEXT twice.**
The RC-7001RCI's (sold separately) node number is displayed.

5 **Select the node number to be deleted, then press [YES].**

6 **Press NEXT.**

※ Press **[NO]** to end, **[YES]** to continue.

Viewing nodes

Use this procedure to search for and display a list of RC-7001RCIs (sold separately) registered in the network.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [NETWORK].**

3 **Press [VIEW NODES].**

4 **Press NEXT twice.**
The node numbers of the RC-7001RCIs (sold separately) registered on the network are indicated with an * mark after them.

※ Press **NEXT** twice to return to the settings menu.

Changing node labels

Use this procedure to add labels to RC-7001RCIs (sold separately) for easier distinction.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [NETWORK].**

3 **Press [EDIT LABEL].**

4 **Press NEXT twice.**
The RC-7001RCI's (sold separately) node number is displayed.

5 **Select the node number to be changed, then press NEXT.**
The edit screen for the selected node appears.

6 **At the "Edit Text" screen, use the first column of LCD buttons to select the position of the character to be edited.**

7 **Select the character to be input with the second column of LCD buttons, then press [SELECT].**
※Lower case letters are input when **[CAPS]** is displayed, capital letters when **[lower]** is displayed.

8 **Press [SAVE].**

9 **Press NEXT.**

※ When **[NO]** is pressed, the setting menu reappears. To continue, press **[YES]**.

Setting the receiver display mode (RDM)

This setting is made for conducting two-way communications between the RC-7001RCI (sold separately) and compatible DENON products. The status information of the compatible DENON product can be displayed on the set's screen. Use this procedure to set the RDM page display position.

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [USER PREF].**

3 **Press [RDM].**

4 **Press NEXT.**

5 **Press [YES].**

6 **Use [FIRST] and [LAST] to set the position at which you want the RDM page to be displayed.**

[FIRST]:
The RDM page is displayed at the beginning of the normal button screen.
[LAST]:
The RDM page is displayed at the end.

※Press **NEXT** to return to the settings menu.

Checking the remote control unit version

1 **Press RC SETUP for 3 seconds.**
The "PROGRAM DEVICE" menu is displayed.

2 **Press NEXT twice, then press [USER PREF].**

3 **Press [VERSION INFO].**
The **LCD button** version information is displayed.

※ Press**NEXT** twice to return to the settings menu.

PC Application

RC-7000CI Editor function

❑ **You can use RC-7000CI Editor for the following operations.**

- Editing RC-7000CI setting data.
- Backing up RC-7000CI setting data on the PC.
- Remote control code database downloading.

❑ **Recommended devices and environment required for using RC-7000CI Editor.**

- Personal computer running Windows® XP Service Pack 2 operating system.
- HDD with sufficient free disk space.
- USB 2.0 connection terminal.
- Internet connection environment

RC-7000CI Editor installation

First connect the RC-7000CI to the personal computer using the USB cable provided.
Use a computer connected to the Internet.

1 Load the CD-ROM (RC-7000CI Editor) in the CD-ROM drive.

2 Run "RC-7000CI Editor.exe"

※Follow the installation instructions on the installation wizard screen.
※After installation, the "Installation complete" dialog message is displayed.

3 Press "Finish" to finish installation, and start the application.

Using RC-7000CI Editor

1 When using the application for the first time, check the New User box, enter e-mail address, password, etc., and press OK.

2 Run RC-7000CI Editor.exe from the CD-ROM drive in My Computer.
RC-7000CI Editor starts up.

3 Follow the wizard instructions.

NOTE

- During data upload or download using RC-7000CI Editor do not carry out the following operations. Failure of the main unit and personal computer may result.
  - Remove the USB cable.
  - Switch off the personal computer power.
  - Remove batteries from main unit.

Troubleshooting

1. If a problem should arise, first check the following:

2. Is the set being operated as described in the operating instructions ?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

Symptom	Cause	Countermeasure	Page
Set does not work properly when remote control unit operated.	• Batteries are worn.	• Replace with new batteries.	1
	• You are operating outside of the specified range.	• Operate within the specified range.	2
	• Obstacle between main unit and remote control unit.	• Remove the obstacle.	2
	• The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment.	• Insert the batteries in the proper direction, following the polarity marks in the battery compartment.	2
	• The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.).	• Move the set to a place in which the remote control sensor will not be exposed to strong light.	2
Display screen does not appear.	• Brightness setting is inappropriate.	• Adjust the screen's brightness at "Adjusting the contrast".	6
Wireless connections with the RC-7001RCI (sold separately) cannot be established.	• Radio interference with other devices. • Change in wireless environment.	• Move away from microwave ovens, devices using a wireless LAN, or other wireless devices.	22
		• Use the procedure below to set the network again. ① Press the RESET/CONFIG button for about 10 seconds so the indicator lights red. ② Press the RESET/CONFIG button again for about 3 seconds so the indicator lights green. ③ Next register the RC-7000CI (sold separately) again.	23

Specifications

Batteries: LR03/AAA Type (four batteries)

Battery service life: Approx. 3 months (depending on usage frequency)

Frequency: 2,405 MHz – 2,475 MHz (15 ch) Bandwidth 2 MHz

Radio frequencies: 2.4 GHz

Modulation method: O-QPSK

Spectrum spread system: DSSS

Communication distance: 30 m (varies with the environment)

Maximum external dimensions: 63 (W) x 233 (H) x 28 (D) mm (2-31/64" x 9-11/64" x 1-7/64")

Weight: 170 g (Approx 6.0 oz)

DENON®

LIMITED WARRANTY

(USA)

	PAGE
USA (ENGLISH)	2
CANADA (ENGLISH)	3
CANADA (FRENCH)	4

USA

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(800) 497-8921
(888) 544-8434 Fax

DENON REGIONAL SUPER SERVICE CENTERS (Repair only-No parts orders please)

PYRAMID AUDIO
305 E. Braker Lane
Austin, TX 78753-2746
(512) 458-8292
(512) 453-4542 Fax

UNITED RADIO SERVICE
5717 Enterprise Parkway
E. Syracuse, NY 13057-2905
(800) 634-8606
(315) 446-8505 Fax

AUDIO SERVICES
544 Central Dr., Suite 101
Virginia Beach, VA 23454-5245
(757) 498-8277
(757) 498-9554 Fax

INNER SOUND
1416 S.E. Morrison Street
Portland, OR 97214-2646
(503) 238-1955
(503) 238-1787 Fax

NORMAN'S ELECTRONICS
3653 Clairmont Road
Atlanta, GA 30341-4907
(770) 451-5057
(770) 455-8337 Fax

GOLD CROWN ELECTRONICS
Victoria Business Park
129 E. Savarona Way
Carson, CA 90746-1406
(310) 538-8282
(310) 538-8281 Fax

SERVICE WIDE TECHNOLOGIES
2239 Curtiss Street
Downers Grove, IL 60515-4010
(630) 969-7333
(630) 969-7330 Fax

ELECTRONICE EXPRESS
1809 E. Fabyan Parkway
West Chicago, IL 60185
(630) 208-4600
(630) 208-4601 Fax

CANADA

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham Ontario, L3R 5B1
(905) 475-4085
(905) 475-4159 Fax

This warranty will be honored only in the **U.S.A**

DENON®
LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by DENON ELECTRONICS (USA), LLC remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA), LLC DEALER.

Product Category

A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	YEAR(S)
DVD Receiver, DVD Home Theater System			ADV, S	1	
Digital Surround Decoder			AVD	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier			TU, PMA	3	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-A, D-F, D-G, D-M, CDR-M, DRR-M, S	1	
Turntable	1	Autolift / Manual	DP-L, DP-M	4	
	2	Full Automatic	DP-F	2	
Speaker			SC	1	
Sub-woofer			DSW	2	
Network Multimedia Server / Client (Hard Disc Only)	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	–	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge			DL	90	DAYS
Remote Controller			RC	90	

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (USA), LLC. (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer, unless the product is purchased through the U.S.A. Military Exchange Service where the Warranty will be One (1) year for all products listed above except in the case of Cartridges, Accessories, Remote Controller and Headphone which will remain at 90 days. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please contact DENON as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

a. You are responsible for transporting your unit or arranging for its transportation.
b. If shipment of your unit is required;
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
c. WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
d. You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in a writing signed by an officer of Denon Electronics USA, LLC.

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(800) 497-8921
www.usa.denon.com

This warranty will be honored only in **Canada.**

DENON®
LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by D&M CANADA INC. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED D&M CANADA INC. DEALER.

Product Category

Turntable	1	Autolift	DP-L	4	YEARS
	2	Full Automatic	DP-F	2	
Tuner, Integrated Amplifier			TU, PMA	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Digital Surround Decoder			AVD	3	
Network Multimedia Server / Client	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	–	1	
A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	
DVD Receiver, DVD Home Theater System			ADV, S	1	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M,DRR-M, S	1	
Speaker			SC	1	
Sub-woofer			DSW	2	
Karaoke System			DCG, HMA	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge, Accessories			DL, AU, DM-K, DME	90	DAYS
Remote Controller			RC	90	

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in Canada by D&M CANADA INC. (2) Any product which is not purchased in Canada from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact D&M CANADA INC. as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside Canada. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or D&M CANADA INC. (if you are uncertain as to whether a service station is DENON authorized, please contact D&M CANADA INC. as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

a. You are responsible for transporting your unit or arranging for its transportation.
b. If shipment of your unit is required;
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
c. WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
d. You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN CANADA ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from province to province. This Warranty may not be altered other than in a writing signed by an officer of D&M Canada Inc.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca

Cette garantie ne sera honorée qu'à : **Canada.**

DENON®
GARANTIE LIMITÉE

Durée du garantie non-transférable

La garantie de votre produit DENON, distribué et garanti par D&M CANADA INC. prend effet à partir de la date d'achat du consommateur original auprès d'un revendeur official D&M CANADA INC. pendant les périodes suivantes.

Catégorie de produit

Table tournante	1	Levée auto	DP-L	4	ANNÉES
	2	Auto complet	DP-F	2	
Syntoniseur, amplificateur intégré			TU, PMA	3	
Préamplificateur, préamplificateur numérique Amplificateur de puissance, Préamplificateur phono			PRA, AVP, DAP, POA, HA	3	
Décodeur surround numérique			AVD	3	
Serveur / Client de réseau multimédia	1	Excluant le mécanisme du disque dur	NS	3	
	2	Le mécanisme du disque dur	–	1	
Contrôleur A / V, Récepteur A / V, Récepteur AM / FM			AVC, AVR, DRA	2	
Récepteur DVD, Système DVD Home Theater			ADV, S	1	
Lecteur CD, Lecteur DVD			DCD, DCM, DP, DA, DVD, DVM	1	
Magnétocassette, Enregistreur CD, Enregistreur MD			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
Système Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M,DRR-M, S	1	
Haut-parleurs			SC	1	
Sub-woofer			DSW	2	
Systèmes Karaoke			DCG, HMA	1	
Micro			DM-S	2	
Dock de contrôle pour iPod®			ASD	1	
Casque d'écoute			AH-D, AH-C	1	
Cellule phonolectrice, Accessoires			DL, AU, DM-K, DME	90	JOURS
Télécommande			RC	90	

Apple et iPod sont des marques commerciales d'Apple Computer, Inc., déposées aux Etats-Unis et dans d'autres pays.

Couverture

Cette garantie couvre tous les défauts de matériel ou de fabrication du produit, à l'exception de ceux indiqués ci-après qui conforrment selon les termes durant la periode de la garantie. Ne sont pas couverts par la garantie: (1) Tout produit qui n'est pas distribué au Canada par D&M CANADA INC. (2) Tout produit qui n'a pas été acheté au Canada auprès d'un revendeur officiel DENON (Note: On peut identifier les revendeurs officiels DENON par leur auto-collant "REVENDEUR OFFICIEL DENON" affiché dans leur magasin. Si vous doutez qu'un revendeur soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous.) (3) Tout produit dont le numéro de série a été effacé, modifié ou enlevé. (4) Dommages dus à la détérioration ou à un fonctionnement défectueux à la suite de: a) accident, acte de la nature, abus, utilisation impropre, négligence, réparation au moyen d'un produit non autorisé, debalé, modification, emploi contraire aux instructions fournies avec le produit, b) réparation ou tentative de réparation par quelqu'un non reconnu par DENON. c) tout envoi du produit (la réclamation doit être présentée au transporteur), (5) Articles sujets à détérioration par l'usage (têtes de magnétophone, cellules phono, pointes de lecture phono, piles, etc.). (6) Vérification périodique qui ne révèle aucun défaut. (7) Utilisation du produit hors du Canada. (8) Bandes magnétiques, disques CD ou DVD endommagés. (9) Utilisation commerciale, industrielle ou professionnelle. (10) Toutes charges d'installation ou de déplacement résultant d'un défaut du produit.

Notre paiement

Si votre produit DENON est reconnu défectueux par DENON durant la période d'application de la garantie après la date d'achat du consommateur, DENON réparera ou, à son choix, remplacera avec un modèle neuf, usagé ou équivalent ce produit défectueux sans frais de pièces ni de main d'œuvre.

Exécution de la garantie

Si votre produit nécessite service, il peut être envoyé à tout atelier de service officiel DENON ou chez D&M CANADA INC. (Si vous doutez que l' atelier de service soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous). Dans tous les autres cas, les procédures suivantes s' appliquent si votre article doit être transporté pour un service sous garantie.

a. Vous êtes responsable du transport de votre article ou vous devez vous arranger vous-même pour son transport.
b. Si votre article doit être envoyé, vous devez payer les frais d'envoi initiaux, mais nous payerons les frais de retour si la garantie couvre les réparations.
c. LORSQUE VOUS RENVOYEZ VOTRE ARTICLE POUR UN SERVICE SOUS GARANTIE, VOUS DEVEZ JOINDRE UNE COPIE DE LA FACTURE D'ACHAT D'ORIGINE.
d. Vous devez inclure également vos nom, adresse, numéro de téléphone de jour, numéros de modèle et de série du produit et une description du problème. Dans le cas d'un lecteur CD ou DVD, joindre un disque que l'appareil n'a pu lire pour test. Il vous sera retourné avec l'article.

CETTE GARANTIE EST VALABLE SEULMENT AU CANADA.

Si votre produit ne requiert aucun service mais que vous avez des questions quant à son fonctionnement, contactez notre département technique dont l'adresse figure ci-dessous.

CETTE GARANTIE EST EXPRESSÉMENT FAITE EN LIEU ET PLACE DE TOUTES LES AUTRES GARANTIES EXPRIMÉES OU SOUS-ENTENDUES' Y COMPRIS, SANS SE LIMITER À CELLES-CI, LES GARANTIES MARCHANDES ET SPÉCIFIQUES POUR UN USAGE PARTICULIER.

NOTRE RESPONSABILITÉ SE LIMITE À LA RÉPARATION OU AU REMPLACEMENT, À NOTRE CHOIX, DE TOUT PRODUIT DÉFECTUEUX ET N'INCLUT EN AUCUN CAS DES DOMMAGES FORTUITS, COMMERCIAUX INDIRECTS NI MATÉRIELS D'AUCUNE SORTE. NOUS NOUS SOMMES PAS RESPONSABLES POUR LA PERTE DE LES PRODUITS ET/OU LES MARCHANDISES ENDOMMAGEES PENDANT LE TRNASPORT DES BIENS.

CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITES QUANT À LA DURÉE D'UNE GARANTIE SOUS-ENTENDUE ET/OU NE PERMETTENT PAS L'EXCLUSION DE DOMMAGES FORTUITS. LES LIMITATIONS ET EXCLUSIONS MENTIONNÉES PLUS HAUT PEUVENT NE PAS S'APPLIQUER À VOTRE CAS.

Cette garantie vous donne des droits légaux spécifiques, mais il se pourrait que vous ayez d'autres droits qui varient d'une province à l'autre. La garantie ne peut être modifiée que par un document signé par un gestionnaire autorisé de D&M Canada.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca

DENON SERVICE NETWORK

- **Please consult the outlet where the equipment was purchased.**
- **Bitte wenden Sie sich an den Händler, bei dem Sie das Produkt gekaufthaben.**
- **SVP veuillez consulter votre revendeur.**
- **Neemt u alstublieft contact op met het verkooppuntwaar u de apparatuur heeft gekocht.**
- **Por favor consulte en el establecimiento donde compró el equipo.**
- **Vänligen ta kontakt med butiken där du köpt utrustningen.**
- **Rivolgetevi al rivenditore che vi ha venduto l'apparecchio.**
- **Contacte a loja onde comprou o equipamento.**

Australia	Audio Products Group Pty Ltd. 67 O'Riordan Street Alexandria NSW 2015, PO Box 150, Mascot NSW 1460 Australia Tel: 1300 134 400 Fax: +61 2 9578 0159
Austria	Digital-Professional-Audio Vertriebsges.m.b.H., Seeböckgasse 59, A-1160 Wien Tel: 01-480-1006 Fax: 01-485-7679
Belgium	Transtel-Sabima P.V.B.A. Duboisstraat 48, B-2060 Antwerpen, Belgium Tel: 03-237-3607
Canada	D&M CANADA INC. 5-505 Apple Creek Blvd., Markham, Ontario, L3R 5B1 Tel: 905-475-4085 Fax: 905-475-4159
Czech republic	EUROSTAR OSTRAVA s.r.o. areal Vodni stavby Praha, budova A2 Dobronicka 635,148 00 Praha 4 Czech Rep. Tel: 261-112-901 Fax: 261-112-904
Denmark	Hifi Klubben A/S Dali Alle 1, 9610 Noerager, Denmark Tel: 45-96 72 10 00 Fax: 45-96 72 10 14
Finland	Soundata Oy Hameentie 157 5th floor 00560 Helsinki Finland Tel: +358-(0)9-4769 3300 Fax: +358-(0)9-4769 3310
France	DENON FRANCE A division of D&M France SAS Tour Ventose, 2 rue des Bourets, 92156 Suresnes Cedex, France Tel:+33(0)1-41-383230 Fax: +33(0)1-41-380110
Germany	DENON DEUTSCHLAND A division of D&M Germany GmbH An der Landwehr 19, D-41334 Nettetal, Germany Tel: +49(0)2157-1208-0 Fax: +49(0)2157-1208-10
Greece	KINOTECHNIKI LTD. 14, PYRGOU STR. 166 75, GLYFADA ATHENS Tel: +30 210 960 1071 Fax: +30 210 960 1072
Hong Kong	D&M Sales and Marketing (H.K.) Ltd. Unit 501, Ocean Centre, Harbour City, 5 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 852-2516-5864 Fax: 852-2516-5940
Hungary	A.I.D.A. Audio Kft. 1112 Budapest Olt u. 37. Hungary Tel: 01-248-2030 Fax: 01-248-2039
Iceland	Einar Farestveit & co hf., Borgartun 28, PBox 5440, 125 Reykjavík. Tel: +354 5207900 Fax: +354 5207910
India	Pro FX Dynamic House. 64, Church Street, Bangalore-560 001, India Tel: +91-80-5768-6722 Fax: +91-80-2559-4298
Indonesia	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: +62-21-633-2730 Fax: +62-21-632-2886
Israel	Newpan Ltd. 14 Rosansky st. Rishon Lezion 75706, Israel. Tel: +972-3-953-5900 Fax: +972-3-961-6193
Italy	Audiodelta S.r.l.19 Via Pietro Calvi 20129 Milano Italy Tel: 39-02-5411-6008 / 39-02-5412-8253 Fax: 39-02-5412-0258
Korea	D&M Sales and Marketing Korea Ltd. Chung Jin B/D., 10F, 53-5, Wonhyoro 3 Ga, Yongsan-Gu, Seoul, 140-719, Korea Tel: 02-715-9041 Fax: 02-715-9040
Malaysia	Wo Kee Hong Trading Sdn Bhd. 2nd Floor, (Left Wing), Bangunan Infinite Centre, Lot 1, Jalan 13/6, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: 03-7954-8088 Fax: 03-7954-7088
Mexico	Labrador, S.A. de C.V. Callejon del Naranjo 35, Naucalpan, 53560, Edo. Mex., Mexico Tel: 52-5359-5161 Fax: 52-5357-1775
Netherlands	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
New Zealand	Avalon Pacific Marketing Limited. 15c Vestey Drive, Mt Wellington, Auckland, New Zealand. PO Box 11 631 Ellerslie, Auckland, New Zealand Tel: +64-9-573-5933 Fax: +64-9-573-3720
Norway	Hi-Fi Klubben Marcus Thranes gate 4-6, 0473 Oslo, Norway Tel: +47 22 80 63 10 Fax: +47 22 80 63 29
Philippines	Lotteworld Audio Video Systems Incorporated CET Building Mezzannine Floor No. 4 Mindanao Avenue, Barangay Bahay Toro, Project 8, Quezon City, Philippines. Tel: +632-929-5334 Fax: +632-929-1343
Poland	HORN DISTRIBUTION S.A. Ulica Kurantow 34, 02-873 Warszawa Poland Tel: +48 22 331 55 33 Fax: +48 22 331 55 00
Portugal	Videoacustica Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: +351 214241770 Fax: +351 214188093
Singapore	ALL (E&E) Service Center Pte Ltd. Machtech Industrial Building, #06-04, No.2, Kallang Pudding Road, Singapore 349307 Tel: 6747-8274 Fax: 6748-9007
Slovakia	BIS AUDIO s.r.o. Dobronivská cesta 1642/6 960 01 Zvolen Tel:045-5400 703 Fax:045-5400 704
South Africa	Mandarin Distributors S.A. 10 Thora Crescent, Wynberg Ext.3 Sandton, PO.Box 5137, Johannesburg Republic of South Africa Tel: 27-11-444-8445 Fax: 27-11-444-8363
Spain	Gaplasa S.A.AV. Ing. Conde de Torroja, 25, 28022 Madrid Tel: 91-746-00-45 Fax: 91-329-44-57
Sweden	Hi-Fi Klubben Göteborg Skänegatan 25, 41252 Göteborg Tel:031 33 51010 Fax:031 33 51019
Switzerland	KOENIG APPARATE AG, Abteilung Elektronik. Eggbühlstrasse 28, CH-8052 Zürich, Switzerland Tel: 01-306-1626 Fax: 01-306-1690
Taiwan R.O.C.	KOLIN-DENON Entertainment INC. 5F-3, No. 14, Shiwei Street, Sanchung City, Taipei Hsien, 241 Taiwan, R.O.C. Realise Tech-Service Co., Ltd. 2F, No. 14, Shiwei Street, Sanchung City, Taipei Hsien, 241 Taiwan, R.O.C.
Thailand	Mahajak Development Co., Ltd. 46 Mahajak Building, Sukhumvit Soi 3 (Nana-Nua) Klongtoey, Wattana, Bangkok Thailand. 10110 Tel: 66-2-256-0020 Fax: 66-2-253-1696
Turkey	Ertekin electronik tic. ve san. a.s. Galipdede Caddesi No.: 113 Kuledibi-Karaköy / Istanbul, Turkey Tel: +90(212)293-9515 Fax: +90(212)249-3512
U.A.E.	V.V. & SONS L.L.C. Street No-11/B, Road NO-128, Shed No-39 Al Khabisi, Deira, Dubai, U.A.E Tel: +971-4-266-2435, 268-4575 Fax: +971-4-266-2052
Ukraine	Mirs Ltd. Osipova str. 37/Office 1, 65012 Odessa, Ukraine Tel: +380 (482) 305530 Fax: +380 (482) 305555
United Kingdom & Eire	DENON UK A division of D&M Audiovisual Ltd. Moorbridge House, Padbury Oaks, 579 Bath Road, Longford, Middlesex, UB7 0EH, United Kingdom Tel: +44(0)1753-680568 Fax: +44(0)1753-689697
U.S.A.	DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive, Mahwah, NJ 07430-2041 Tel: 800-497-8921 Fax: 888-544-8434
Vietnam	Anh Duy Manufacturing – Trading Co., Ltd. 170 Ung Van Kheim St., Ward 25, Blinh Thanh Dist., HCMC, Vietnam Tel: +84 8 898 3424 Fax: +84 8 898 3425

* If there is no service center in your local area, please contact one of our overseas service centers, listed above, for follow-up service consultation.

* Ist kein Service-Center in Ihrer Nähe, setzen Sie sich bitte miteinem der hier aufgelisteten Adressen in Verbindung.

* Si il n'y a pas destation technique proche de chez vous, veuillez contacter nos l' un de noscentres techniques, listés ci dessous, pour toutes demandes techniques.

* Als er geen servicecenter bij uin de buurt is, neem dan contact op een een van onze bovengenoemdeservicecenters voor ondersteuning.

* Si no hay un servicio técnico en su zona, por favor contacte con uno de los servicios técnicos centrales, indicados abajo, para realizar un seguimiento de su consult.

* Om det inte finns någon auktoriserad Denon-verkstad där du bor, kontakta en av våra internationella servicecentra (se ovan).

* Se non ci sono dei centri assistenza autorizzati nella vostra zona, potete fare riferimento agli altri centri assistenza autorizzati, vedi elenco sopra, per qualsiasi consultazione tecnica.

* Caso não exista um centro de assistência técnica na sua área, consulte um dos centros acima apresentados

株式会社デノン コンシューマー マーケティング

本　　社　〒104-0033 東京都中央区新川1-21-2
茅場町タワー 14F

お客様相談センター　TEL：045-670-5555
【電話番号はお間違えのないようにおかけください。】
受付時間　9：30～12：00、12：45～17：30
（弊社休日および祝日を除く、月～金曜日）

故障・修理・サービス部品についてのお問い合わせ先（サービスセンター）については、次の URL でもご確認できます。
http://denon.jp/info/info02.html

後日のために記入しておいてください。	
購入店名：	電話（　-　-　）
ご購入年月日：	年　月　日

DENON
TOKYO, JAPAN
www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China　00D 511 4681 006

RC-7000CI Editor

DENON

for Windows® XP

Version 1.1.0.39

00D3991122007

Printed in Hong Kong

COMPACT disc

Copyright © 2007 D&M Holdings Inc.